



POWERUP LAWNCARE PRODUCTS


MT26
(Multi-Cutter Power Unit)

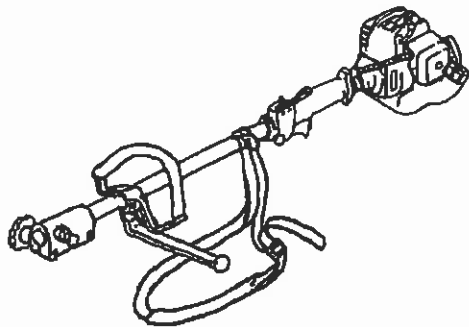


MC-PS
(Pruner Attachment)

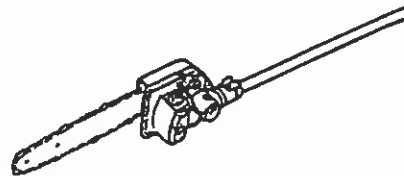


MC-HT
(Hedge Trimmer Attachment)

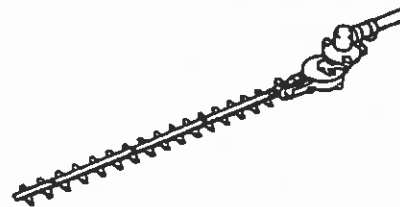


MC-S
(String Trimmer Attachment)

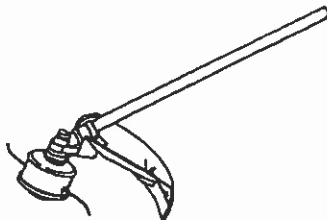


MC-HTS
(Hedge Trimmer Attachment)

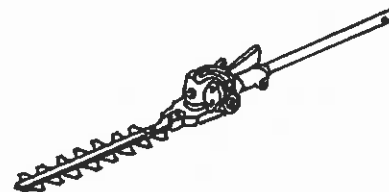

MC-E
(Edger Attachment)

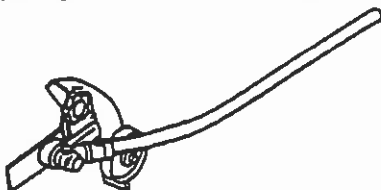

MC-T
(Cultivator Attachment)

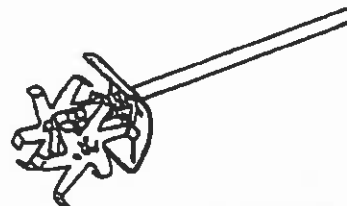

Owner's / Operator's Manual

Completely read and understand this manual before using this product.

Foreword

This Owner's/ Operator's Manual is designed to familiarize the operator with the various features and component parts of the equipment and to assist you with the assembly, operation and maintenance of your new Multi-cutter.

It is essential that any operator of this Multi-cutter reads and understands the contents this manual before using the Multi-cutter.

For additional assistance, contact any local authorized PLP dealer.

Contents

Page

Foreword	1
Safety Instructions	2
Operator Safety	2
Multi-cutter Safety	2
Fuel Safety	3
Multi-cutter Operating Safety	3
Safety and Instruction Decals	4
Product Description.....	6
Assembly	7
Loop Handle Installation	7
MC-S(String Trimmer Attachment)	7
MC-E(Edger Attachment)	8
MC-HTS(Hedge Trimmer Attachment)	9
MC-PS(Pruner Attachment)	9
MC-T(Cultivator Attachment)	10
Connecting the Tool Attachment to the Power Unit	10
Before Operation	11
Chain Oil (Multi-cutter with Pruner Attachment)	11
Engine Oil and Fuel	11
Mixing Gasoline And Oil	12
Starting and Stopping	13
Idle Speed Adjustment.....	14
Operation.....	15
MC-S(Multi-cutter with String Trimmer Attachment)	15
MC-E(Multi-cutter with Edger Attachment)	17
MC-HT/MC-HTS(Multi-cutter with Hedge Trimmer Attachment)	19
MC-PS(Multi-cutter with Pruner Attachment)	20
MC-T(Multi-cutter with Cultivator Attachment)	21
Maintenance	22
Air Filter	22
Fuel Filter	22
Spark Plug.....	22
Cylinder Cooling Fins	23
Spark Arrester	23
MC-S(String Trimmer Attachment)	24
MC-E(Edger Attachment)	24
MC-HT/MC-HTS(Multi-cutter with Hedge Trimmer Attachment)	25
MC-T(Cultivator Attachment)	26
General Cleaning and Tightening	26
Storage	26
Troubleshooting	27
Specifications	27

Safety Instructions

The warning system in This manual identifies potential hazards and has special safety messages that help you and others avoid personal injury, even death.

⚠ DANGER, **⚠ WARNING** and **⚠ CAUTION** are signal words to identify the level of hazard.

⚠ DANGER : signals an extreme hazard that will cause serious injury or death if the recommended precautions are not followed.

⚠ WARNING : signals a hazard that may cause serious injury or death if the recommended precautions are not followed.

⚠ CAUTION : signals a hazard that may cause minor or moderate injury if the recommended precautions are not followed. Two other words are also used to highlight information. "Important" calls attention to special mechanical information and "Note" emphasizes general information worthy of special attention.

Operator safety

1. Read and understand this Manual before using the Multi-cutter. Be thoroughly familiar with the proper use of this Multi-cutter.
2. Always wear eye protection and hearing protection.
3. Always wear heavy long pants, a long sleeved shirt, boots and gloves. Do not wear loose clothing, jewelry, short pants, sandals, or go barefoot. Secure hair so it is above shoulder length.
4. Never operate this Multi-cutter when you are tired, ill, or under the influence of alcohol, drugs or medication.
5. Never start or run the engine inside a closed room or building. Breathing exhaust fumes can cause death.
6. Keep the grip of handles clean of oil, fuel and dirt.

Multi-cutter safety

1. Make sure the Multi-cutter is assembled correctly and that the tool attachment is correctly installed and securely fastened as Instructed in the Assembly section beginning on page 7.
2. Inspect the Trimmer/ Brushcutter before each use. Replace damaged parts. Check for fuel leaks. Make sure all fasteners are in place and tightened securely. Follow the Maintenance instructions beginning on page 22.
3. Shut off the engine and be certain the attached tool has completely stopped moving before inverting the Multi-cutter, performing maintenance on or working on the machine.
4. Make sure the attached tool does not move at engine idle speed. Refer to Idle Speed Adjustment, page 14.
5. Inspect the tool attachment and replace any parts that are cracked, chipped or damaged before using the Multi-cutter.
6. Never use a tool attachment or replacement parts that are not approved by PLP.


7. Maintain the Multi-cutter according to the recommended maintenance intervals and procedures in the Maintenance section beginning on page 22.
8. If running problems or excessive vibration occur, stop immediately and inspect the unit for the cause. If the cause cannot be determined or is beyond your ability to correct, return the Multi-cutter to your servicing PLP dealer for repair.

Fuel safety

1. Gasoline is highly flammable and must be handled and stored carefully. Use a container approved for fuel for storing gasoline and/or fuel/oil mixture.
2. Mix and pour fuel outdoors and where there are no sparks or flames.
3. Do not smoke near fuel or Multi-cutter, or while using the Multi-cutter.
4. Do not overfill the fuel tank. Stop filling 10mm from the top of the tank.
5. Wipe up any spilled fuel before starting the engine.
6. Move the Multi-cutter at least 3m away from the fueling location before starting the engine.
7. Do not remove the Multi-cutter fuel tank cap immediately after stopping the engine.
8. Allow the engine to cool before refueling.
9. Drain the tank and run the engine dry before storing the unit.
10. Store fuel and Multi-cutter away from open flame, sparks and excessive heat. Make sure fuel vapors cannot reach sparks or open flames from water heaters, furnaces, electric motors, etc.

Multi-cutter Operating safety

1. THIS MULTI-CUTTER CAN CAUSE SERIOUS INJURIES. Read the instructions carefully. Be familiar with all controls and the proper use of the Multi-cutter.
2. Never allow children to operate the Multi-cutter. It is not a toy. Never allow adults to operate the unit without first reading this Operator's Manual.
3. Avoid using the Multi-cutter near rocks, gravel, stones and similar material that would cause harmful missiles.
4. Keep children, bystanders and animals outside a 50ft.(15m) radius from the operator and Multi-cutter.

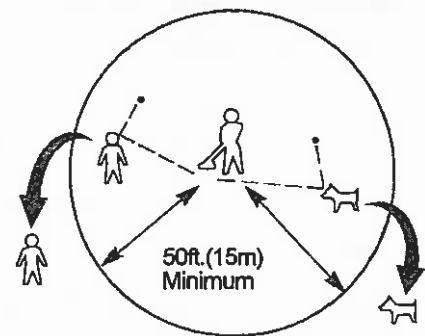

5. If you are approached while operating the Multi-cutter, stop the engine and attached tool moving.
6. Use the Multi-cutter only in daylight or good artificial light.

7. Never operate the Multi-cutter without proper guards in place.
8. Do not put hands or feet near or under any moving parts. Keep clear at all times. Keep all parts of your body away from the moving tool attachment and hot surfaces such as the muffler.
9. Keep a firm footing and balance. Do not overreach.
10. Use the right tool for the job. Do not use the Multi-cutter for any job that is not recommended by PLP.

 
Safety and Instruction Decals

Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any that are damaged or lost.

MT26 (Multi-Cutter Power Unit)



ON ENGINE
(Part No. 267433)




ON ENGINE
(Part No. 283375)

MC-S (String Trimmer Attachment)




ON SHAFT
(Part No. 221501)

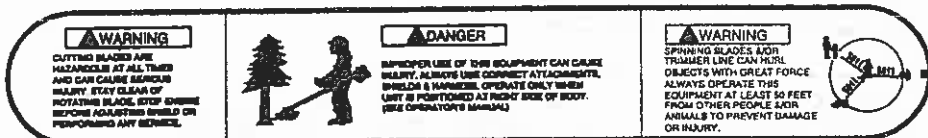


ON SHAFT
(Part No. 221502)

MC-E (Edger Attachment)

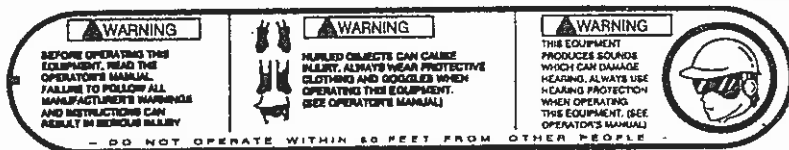

ON SHAFT
(Part No. 221501)

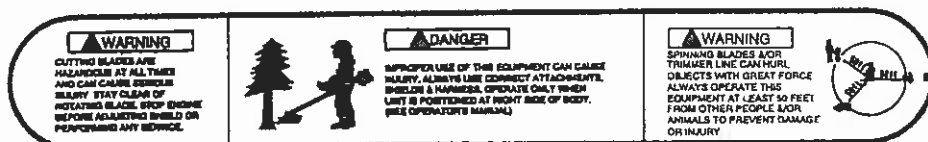


ON SHAFT
(Part No. 221502)




ON BLADE GUARD
(Part No. 221528)

MC-HT (Hedge Trimmer Attachment)

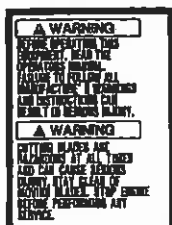

ON SHAFT
(Part No. 217879)

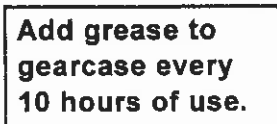

ON GEARCASE
(Part No. 223925)

CAUTION : Extremely sharp blades. Do not touch.

ON BLADE GUIDE PLATE
(Part No. 591450)

MC-HTS (Hedge Trimmer Attachment)



ON GEARCASE
(Part No. 631786)


Add grease to gearcase every 10 hours of use.

ON GEARCASE
(Part No. 223925)

WARNING
BEFORE OPERATING THIS EQUIPMENT, READ THE OPERATOR'S MANUAL. FAILURE TO FOLLOW ALL MANUFACTURER'S WARNINGS AND INSTRUCTIONS CAN RESULT IN SERIOUS INJURY.

WARNING
SPINNING BLADES ARE HAZARDOUS AT ALL TIMES AND CAN CAUSE SERIOUS INJURY. STAY CLEAR OF ROTATING BLADE. STOP ENGINE BEFORE ADJUSTING SHIELD OR PERFORMING ANY SERVICE.

ON SHAFT
(Part No. 217879)

<p>WARNING</p> <p>BEFORE OPERATING THIS EQUIPMENT, READ THE OPERATOR'S MANUAL. FAILURE TO FOLLOW ALL MANUFACTURER'S WARNINGS AND INSTRUCTIONS CAN RESULT IN SERIOUS INJURY.</p>	<p>WARNING</p> <p>HURLED OBJECTS CAN CAUSE INJURY. ALWAYS WEAR PROTECTIVE CLOTHING AND GOGGLES WHEN OPERATING THIS EQUIPMENT. (SEE OPERATOR'S MANUAL)</p>	<p>WARNING</p> <p>THIS EQUIPMENT PRODUCES SOUNDS WHICH CAN DAMAGE HEARING. ALWAYS USE HEARING PROTECTION WHEN OPERATING THIS EQUIPMENT. (SEE OPERATOR'S MANUAL)</p> 
--	--	--

- DO NOT OPERATE WITHIN 50 FEET FROM OTHER PEOPLE -



ON SHAFT
(Part No. 221501)

MC-PS (Pruner Attachment)

<p>WARNING</p> <p>BEFORE OPERATING THIS EQUIPMENT, READ THE OPERATOR'S MANUAL. FAILURE TO FOLLOW ALL MANUFACTURER'S WARNINGS AND INSTRUCTIONS CAN RESULT IN SERIOUS INJURY.</p>	<p>WARNING</p> <p>HURLED OBJECTS CAN CAUSE INJURY. ALWAYS WEAR PROTECTIVE CLOTHING AND GOGGLES WHEN OPERATING THIS EQUIPMENT. (SEE OPERATOR'S MANUAL)</p>	<p>WARNING</p> <p>THIS EQUIPMENT PRODUCES SOUNDS WHICH CAN DAMAGE HEARING. ALWAYS USE HEARING PROTECTION WHEN OPERATING THIS EQUIPMENT. (SEE OPERATOR'S MANUAL)</p> 
--	--	---

- DO NOT OPERATE WITHIN 50 FEET FROM OTHER PEOPLE -

ON SHAFT
(Part No. 221501)

<p>WARNING</p> <p>CUTTING BLADES ARE HAZARDOUS AT ALL TIMES AND CAN CAUSE SERIOUS INJURY. STAY CLEAR OF ROTATING BLADE. STOP ENGINE BEFORE ADJUSTING SHIELD OR PERFORMING ANY SERVICE.</p>	<p>DANGER</p> <p>IMPROPER USE OF THIS EQUIPMENT CAN CAUSE INJURY. ALWAYS USE CORRECT ATTACHMENTS, SHIELD & HARNESS. OPERATE ONLY WHEN LIFT IS POSITIONED AT RIGHT SIDE OF BODY. (SEE OPERATOR'S MANUAL)</p> 	<p>WARNING</p> <p>SPINNING BLADES FOR TRIMMER LINE CAN HURL OBJECTS WITH GREAT FORCE. ALWAYS OPERATE THIS EQUIPMENT AT LEAST 50 FEET FROM OTHER PEOPLE AND ANIMALS TO PREVENT DAMAGE OR INJURY.</p> 
---	--	--

ON SHAFT
(Part No. 221502)

DANGER

THIS PRODUCT CONDUCTS ELECTRICITY. WATCH FOR WIRES, KEEP SUFFICIENT DISTANCE AWAY FROM ELECTRICAL POWER LINES.





ON SHAFT
(Part No. 219937)

MC-T (Cultivator Attachment)

<p>WARNING</p> <p>BEFORE OPERATING THIS EQUIPMENT, READ THE OPERATOR'S MANUAL. FAILURE TO FOLLOW ALL MANUFACTURER'S WARNINGS AND INSTRUCTIONS CAN RESULT IN SERIOUS INJURY.</p>	<p>WARNING</p> <p>HURLED OBJECTS CAN CAUSE INJURY. ALWAYS WEAR PROTECTIVE CLOTHING AND GOGGLES WHEN OPERATING THIS EQUIPMENT. (SEE OPERATOR'S MANUAL)</p>	<p>WARNING</p> <p>THIS EQUIPMENT PRODUCES SOUNDS WHICH CAN DAMAGE HEARING. ALWAYS USE HEARING PROTECTION WHEN OPERATING THIS EQUIPMENT. (SEE OPERATOR'S MANUAL)</p> 
--	--	--

- DO NOT OPERATE WITHIN 50 FEET FROM OTHER PEOPLE -

ON SHAFT
(Part No. 221501)


<p>WARNING</p> <p>CUTTING BLADES ARE HAZARDOUS AT ALL TIMES AND CAN CAUSE SERIOUS INJURY. STAY CLEAR OF ROTATING BLADE. STOP ENGINE BEFORE ADJUSTING SHIELD OR PERFORMING ANY SERVICE.</p>	<p>DANGER</p> <p>IMPROPER USE OF THIS EQUIPMENT CAN CAUSE INJURY. ALWAYS USE CORRECT ATTACHMENTS, SHIELD & HARNESS. OPERATE ONLY WHEN LIFT IS POSITIONED AT RIGHT SIDE OF BODY. (SEE OPERATOR'S MANUAL)</p> 	<p>WARNING</p> <p>SPINNING BLADES FOR TRIMMER LINE CAN HURL OBJECTS WITH GREAT FORCE. ALWAYS OPERATE THIS EQUIPMENT AT LEAST 50 FEET FROM OTHER PEOPLE AND ANIMALS TO PREVENT DAMAGE OR INJURY.</p> 
---	--	--

ON SHAFT
(Part No. 221502)

Product Description

MT26


(Multi-Cutter Power Unit)

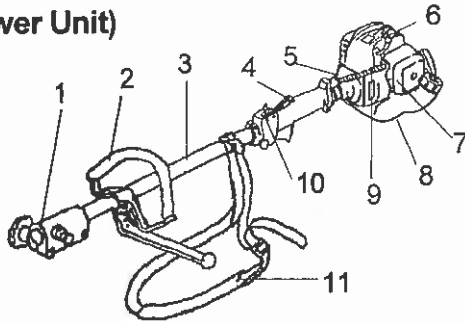

1. Shaft connector
2. Loop Handle
3. Shaft Assembly
4. Shaft Grip
5. Clutch Drum Housing
6. Engine
7. Air Filter
8. Fuel Tank
9. Throttle Cable and Stop Switch Wires
10. Throttle Trigger and Stop Switch
11. Shoulder Hanging Strap

MC-S


(String Trimmer Attachment)

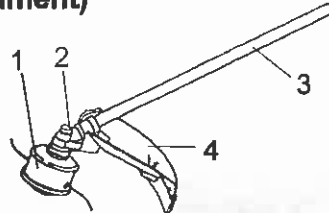

1. Trimmer Head
2. Gearcase
3. Shaft Assembly
4. Guard

MC-E



(Edger Attachment)

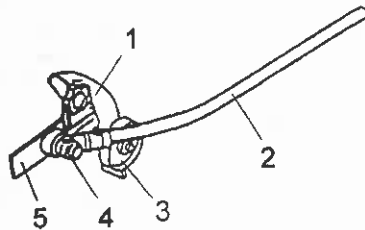

1. Blade Guard
2. Shaft Assembly
3. Wheel
4. Gearcase
5. Edger Blade

MC-HT



(Hedge Trimmer Attachment)

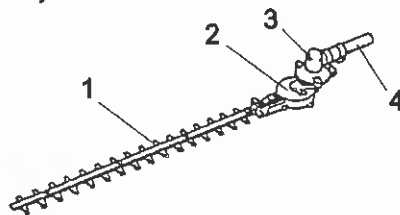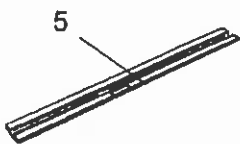

1. Blade and Guide Bar
2. Gearcase
3. Angle Drive
4. Shaft Assembly
5. Blade Sheath

MC-HTS


(Hedge Trimmer Attachment)

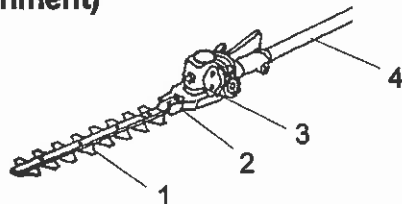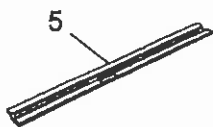

1. Blade and Guide Bar
2. Gearcase
3. Angle Drive
4. Shaft Assembly
5. Blade Sheath

MC-PS


(Pruner Attachment)

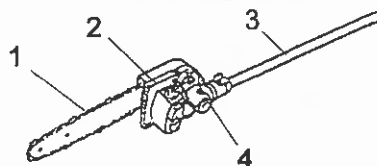

1. Chain and Guide Bar
2. Pruner Head
3. Shaft Assembly
4. Gearcase

MC-T

(Cultivator Attachment)

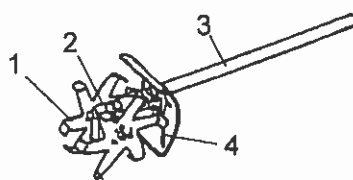


1. Cultivator Tine
2. Gearcase
3. Shaft Assembly
4. Shield

Assembly

Loop Handle Installation

1. Place the loop handle and the bottom clamp on the shaft approximately 23cm(9 inches) from the end of the stop switch/ throttle trigger assembly.
2. Install the four screws and nuts. Tighten the screws evenly.
3. Reposition the loop handle up or down the driveshaft to the most comfortable position, and tighten the screw and nuts.

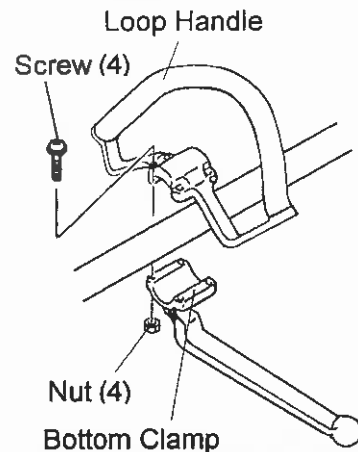

MC-S(String Trimmer Attachment)

Installing Guard



WARNING

POTENTIAL HAZARD


- Foreign objects can be thrown by String Trimmer.

WHAT CAN HAPPEN

- Contact with thrown objects can cause personal injury.

HOW TO AVOID THE HAZARD

- Never operate the String Trimmer without the guard.

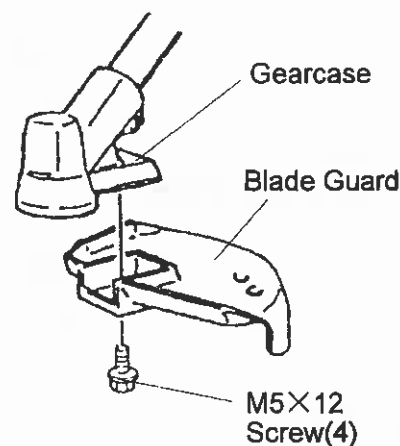


Blade Guard

Attach the blade guard to the gearcase with the four M5x12 screws as shown.

Trimmer Head Guard

(Install the string cutoff blade and guard extension to the blade guard.)

1. Fasten the string cutoff blade to the blade guard with two M5x25 screws and hex nuts as shown.
2. Attach the guard extension to the blade guard with the five M5x15 screws, washers and hex nuts as shown.

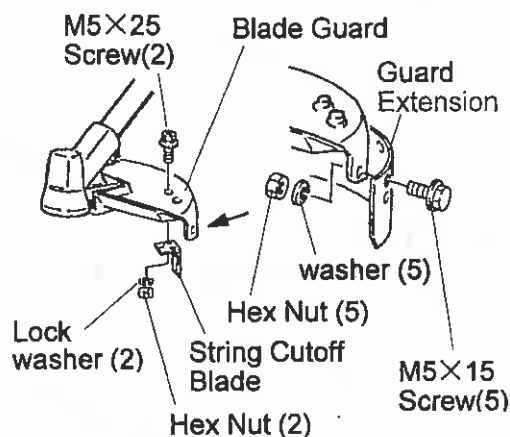

Installing Trimmer Head



CAUTION

POTENTIAL HAZARD

- If the cutting attachment is not adequately tightened, it can come loose from the String Trimmer Attachment during use.


WHAT CAN HAPPEN

- This may cause damage to property or personal injury.

HOW TO AVOID THE HAZARD

- Make sure the cutting attachment head is securely fastened to the attaching shaft in the gearcase.

1. Align the hole in the boss adapter with the guide slot in the gearcase.
2. Insert the $\phi 3.5\text{mm}$ pin into the hole in the boss adapter and the guide slot in the gearcase to lock the attaching shaft.
3. Thread the trimmer head adapter into the attaching shaft, then tighten the trimmer head by hand.
Note: The trimmer head adapter has left-hand thread.
4. Remove the $\phi 3.5\text{mm}$ pin from the boss adapter and gearcase.

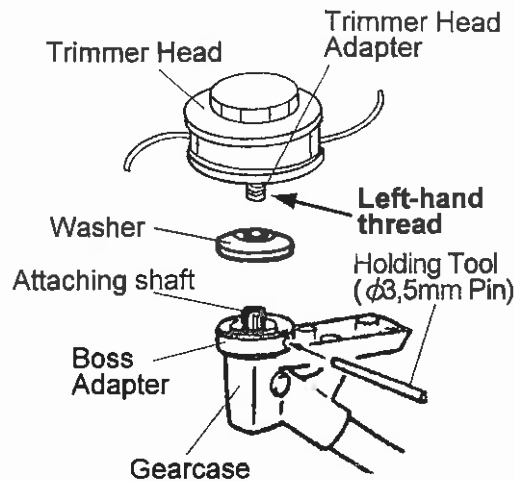

MC-E(Edger Attachment)

Installing Guard

! WARNING

POTENTIAL HAZARD

- Foreign objects can be thrown by Edger.


WHAT CAN HAPPEN

- Contact with thrown objects can cause personal injury.

HOW TO AVOID THE HAZARD

- Never operate the Edger without the blade guard.

1. Install the collar onto the plate stud.
2. Install the Guard onto the plate stud, making sure the Guard stud fits into the matching slot in the plate.
3. Install the flat washer, lock washer and hex nut onto the plate stud.
4. Install the flat washer and knob onto the Guard.

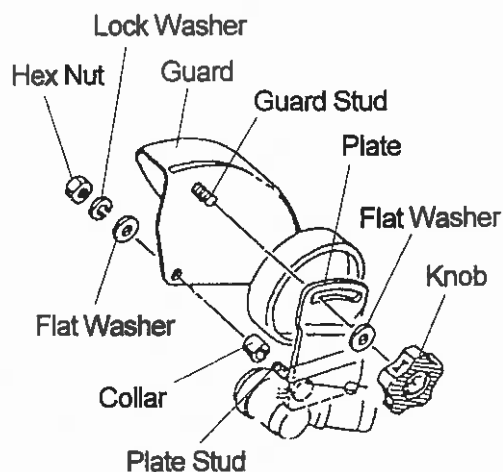

! CAUTION

POTENTIAL HAZARD

- If the Edger blade is not adequately tightened, it can come loose from the Edger during use.

WHAT CAN HAPPEN

- This may cause damage to property or personal injury.


HOW TO AVOID THE HAZARD

- Make sure the Edger blade is securely fastened to the splined shaft in the gearcase.

1. Install the boss onto the attaching shaft out of the gearcase.
2. Install the edger blade, clamping washer and blade bolt.

Note: The blade bolt has left-hand thread.

3. Align the hole in the boss adapter with the guide slot in the gearcase.
4. Insert the $\phi 3.5\text{mm}$ pin into the hole in the boss adapter and the guide slot in the gearcase to lock the attaching shaft.
5. Tighten the blade bolt to 11.3 Nm (100 in. -lbs.).
6. Remove the $\phi 3.5\text{mm}$ pin from the boss adapter and gearcase.

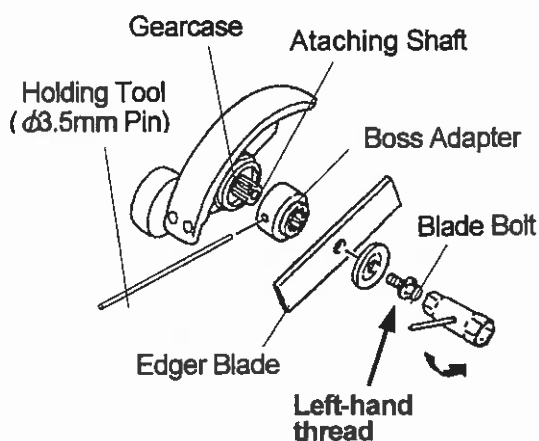

MC-HTS(Hedge Trimmer Attachment) Installing Shaft and Gearcase

Attach the driveshaft tube assembly to the Hedge Trimmer gearcase assembly.


Note:

Carefully inspect both ends of the drive shaft protruding from the drive shaft tube. The squared end of the drive shaft positions toward the connector of the power unit.

The splined end of the drive shaft connector to the gearcase assembly while rotating the drive shaft to engage the splines. Align the locating holes and install the locating

screw through the side of the gearcase. Then tighten the clamping screws.

If properly installed, rotating the square end of the drive shaft will cause the trimmer blades to move.

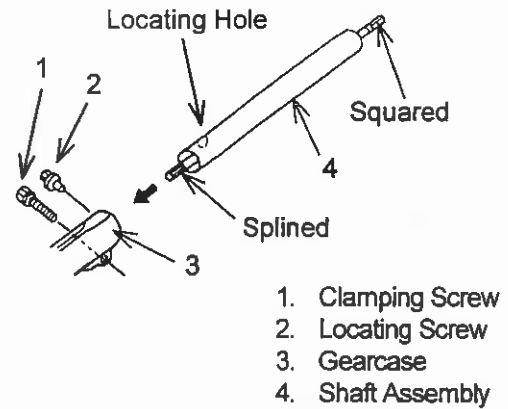

MC-PS (Pruner Attachment)




Installing Guide Bar and Chain

1. Remove the nuts from the two bar studs.
2. Fit the guide bar over the two bar studs. Do not engage the chain tensioner adjustment pin hole at this time.
3. place the chain over the rim sprocket and into the groove on the guide bar. Make sure the cutting teeth edges are facing forward on the top side of the guide bar.
4. Pull the guide bar forward until the chain tensioner adjustment pin hole is positioned over the chain tensioner adjustment pin.

If necessary, turn the chain tensioner screw in the appropriate direction to align the pin with the hole. Check that the drive links on the chain fit correctly into the rim sprocket and guide bar groove.

5. Install the sprocket cover onto the two bar studs. Install the bar stud nuts, but leave the nuts finger-tight.
6. Rotate the chain tensioner screw until all slack is removed between the chain and the bottom of the guide bar, but loose enough to allow you to pull the chain around the guide bar by hand.

7. Tighten the bar stud nuts and recheck the chain tension.
IMPORTANT: When using a new chain, you must check the chain tension frequently and adjust the tension as necessary until the chain breaks in. A correctly adjusted chain gives optimum cutting performance and prevents premature wear to both the chain and guide bar.

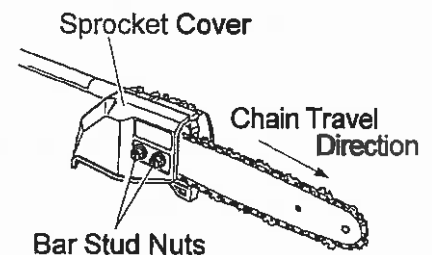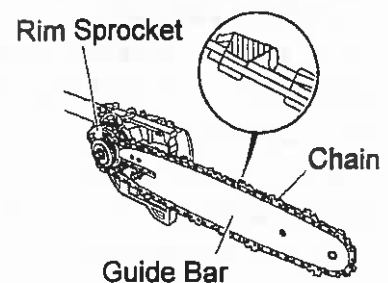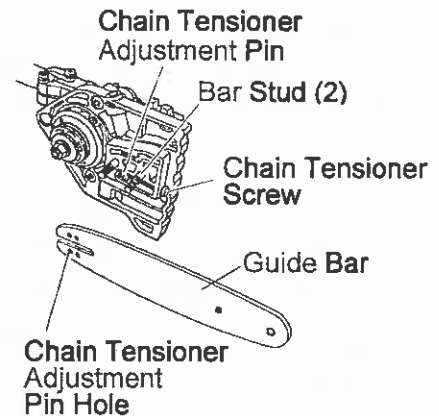




MC-T (Cultivator Attachment)

Installing shaft and Shield

Attach the driveshaft tube assembly to the cultivator gearcase assembly.

NOTE: Carefully inspect both ends of the driveshaft protruding from the driveshaft tube. The squared end of the driveshaft positions toward the connector of the power unit. The splined end of the driveshaft connects to the cultivator gearcase assembly. Insert the driveshaft tube assembly into the cultivator gearcase assembly while rotating the driveshaft to engage the splines. Align the locating holes and install the locating screw through the side of the gearcase. Then tighten the clamping screws. If properly installed, rotating the square end of the driveshaft will cause the cultivator tines to turn.


Place the plastic collar onto the driveshaft tube approximately 2.5cm from the cultivator gearcase, locating the ends as shown in sketch. Then place the two bracket parts onto the plastic collar and fasten securely with two 6 mm screws. Attach the shield to the bracket with four 5 mm screws.

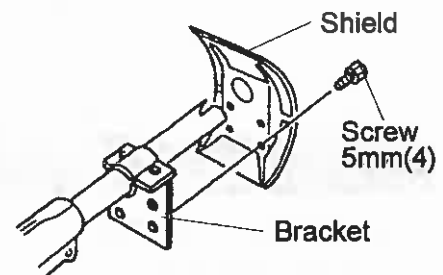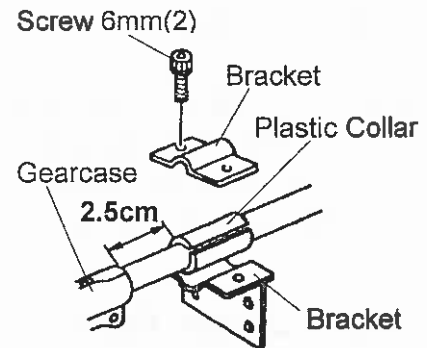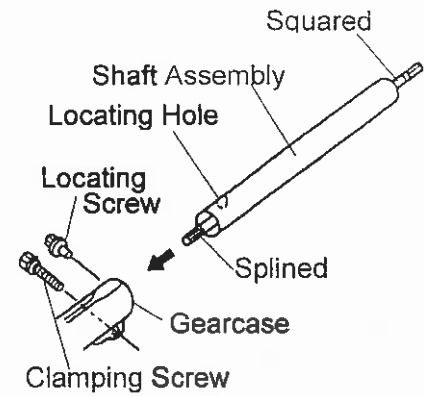

Connecting the Tool Attachment to the Power Unit

First, loosen the clamping knob so shaft of the tool attachment can be inserted into the tube coupler. Pull the detent knob outward and gently rotate attachment shaft back and forth while

inserting to be sure the driveshafts completely in place. The spring loaded detent knob will snap into place when the attachment shaft is correctly positioned. Tighten the clamping knob. When changing the tool attachment be careful not to over loosen the clamping knob to prevent it from falling.

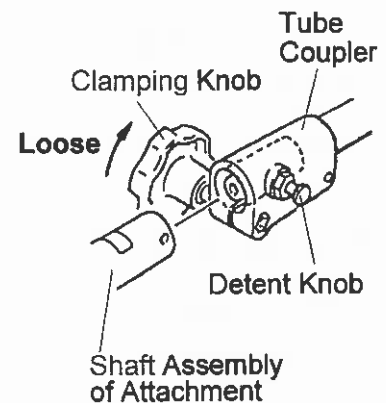

Before Operation

Chain Oil (Multi-Cutter with Pruner Attachment)

The chain and guide bar are lubricated by a centrifugal pump. The oil discharge rate is controlled by the oil discharge adjustment screw on the top of the pruner head. Remove the oil tank filler cap fill the tank, then replace the cap.



IMPORTANT: Only use oil designed for lubricating chain saw chains and guide bars. Do not use waste oil. Never run the chain dry. In temperatures below freezing, check the chain oil viscosity (pour point). If the oil is not rated for use below freezing, it may not provide adequate lubrication, resulting in damage to the oil pump, chain and guide bar.

IMPORTANT: When filling the oil tank for the first time, or when the tank is completely empty, wait approximately 60-90 seconds before starting the Pruner. This will give the oil time to flow from the tank to the pump. Otherwise, an air lock can occur which will prevent oil from moving through the pump. This will result in damage to the chain and guide bar.

Engine Oil and Fuel

1. Mix and pour fuel outdoors and where there are no sparks or flames.
2. Always shut off the engine before refueling. Never remove the Multi-Cutter fuel tank cap while the engine is running or immediately after stopping the engine.

WARNING

POTENTIAL HAZARD

- Gasoline contains gasses that can build up pressure inside a fuel tank.


WHAT CAN HAPPEN

- fuel can be sprayed on you when removing fuel tank cap.

HOW TO AVOID THE HAZARD

- Remove fuel tank cap slowly to avoid injury from fuel spray.

3. Always open the fuel tank cap slowly to release any possible pressure inside the tank.
4. Do not overfill the fuel tank. Stop filling 10mm from the top of the tank.
5. Tighten the fuel tank cap carefully but firmly after refilling.
6. Wipe up any spilled fuel before starting the engine.
7. Move the Multi-Cutter at least 3m (10ft.) away from the fueling location and fuel storage container before starting the engine.

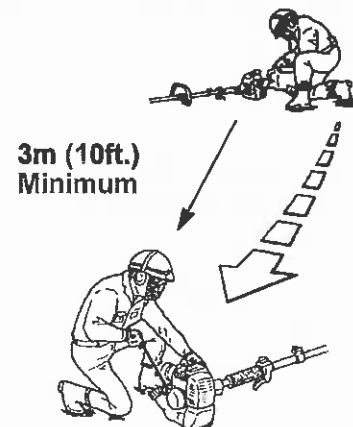

POTENTIAL HAZARD

- In certain conditions gasoline is extremely flammable and highly explosive.

WHAT CAN HAPPEN

- A fire or explosion from gasoline can burn you, others and cause property damage.

HOW TO AVOID THE HAZARD

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is cold.
Wipe up any gasoline that spills.
- Do not fill the fuel tank completely. Add gasoline to the fuel tank until the level is 10mm below the bottom of the filler neck. This empty space in the tank allows gasoline to expand.
- Never smoke when handling gasoline, and stay away from an open flame with gasoline in an approved container and keep it out of the reach of children.
- Do not mix fuel for more than two month use.

Recommended Oil Type

Only use a two-cycle engine oil formulated for use in high-performance, air-cooled two-cycle engines.

IMPORTANT: Do not use two-cycle oil intended for water cooled outboard motors. This type of two-cycle engine oil does not have the additives for air-cooled two-cycle engines and can cause engine damage.

Do not use automotive motor oil. This type of oil does not have the proper additives for air-cooled two-cycle engines and can cause engine damage.

Recommended Fuel Type

Use clean, unleaded gasoline with an octane rating of 85 or higher. Use of unleaded gasoline results in fewer combustion chamber deposits and longer spark plug life. Use of premium grade fuel is not necessary or recommended.

IMPORTANT: Never use gasohol or alcohol blended fuels in this engine.

Mixing Gasoline and Oil

IMPORTANT: The engine used on this Trimmer/ Brushcutter is of a two-cycle design. The internal moving parts of the engine, i.e., crankshaft bearings, piston pin bearings and piston to cylinder wall contact surfaces, require oil mixed with the gasoline for lubrication.

Failure to add oil to the gasoline or failure to mix oil with the gasoline at the appropriate ratio will cause major engine damage which will void your warranty.

Fuel Mixture

The fuel: oil ratio is 25 parts gasoline to 1 part oil or 25:1.

Fuel Mixture Chart 25:1

Gasoline	two-cycle oil
1 litre	40 ml /cc
2 litre	80 ml /cc
5 litre	200 ml /cc

Mixing Instructions


IMPORTANT: Never mix gasoline and oil directly in the Multi-cutter fuel tank.

1. Always mix fuel and oil in a clean container approved for gasoline.
2. Mark the container to identify it as fuel mix for the Multi-cutter.
3. Use regular unleaded gasoline and fill the container with half the required amount of gasoline.
4. Pour the correct amount of oil into the container then add the remaining amount of gasoline.
5. Close the container tightly and shake it momentarily to evenly mix the oil and the gasoline before filling the tank on the Multi-cutter.
6. When refilling the Multi-cutter fuel tank, clean around the fuel tank cap to stop dirt and debris from entering the tank during cap removal.
7. Always shake the premix fuel container momentarily before filling the fuel tank.
8. Always use a spout or funnel when fueling to reduce fuel spillage.
9. Fill the tank only to within 10mm from the top of the tank. Avoid filling to the top of the tank filler neck.

Starting and Stopping

Before Starting the Engine

1. Fill the fuel tank as instructed in the Before Operation section of this manual.
2. Rest the Multi-cutter on the ground.
3. Make sure the cutting attachment is clear of any broken glass, nails, wire, rocks or other debris.
4. Keep all bystanders, children and animals away from the working area.

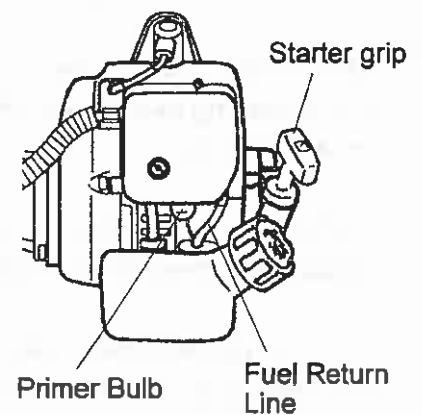


Cold Starting Procedure

The carburetor on this engine is equipped with a fuel primer and a choke system.


To start a "cold" engine properly, perform the following procedure:

1. Pump the primer bulb until fuel can be seen flowing through the fuel return line to the fuel tank. Flowing fuel should be almost clear, not foamy or full of bubbles.
2. Turn the choke lever to the Close "N" position.
3. With the stop switch "ON", and the throttle trigger positioned at Fast-idle start position, pull the starter grip. After the engine is started, turn the choke lever to the Open "I" position. Then squeeze and release the throttle trigger to allow it to return to the idle position.

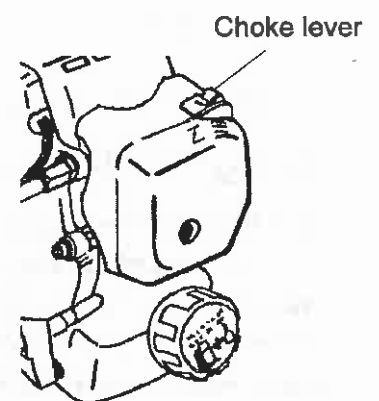

If the engine stops running before you turn the choke lever to the Open "I" position :

Go ahead and open the choke, pull the starter grip with the throttle trigger positioned at Fast-idle start position.

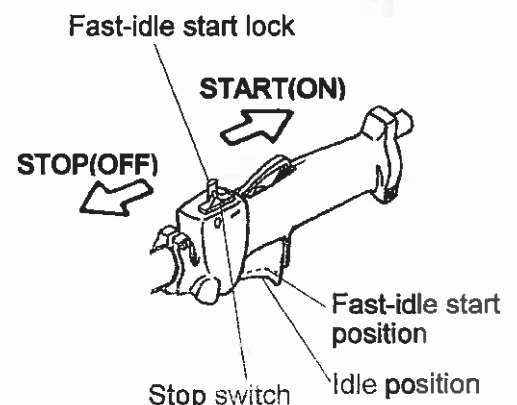

Hot Restart

To start the engine that is already warmed up (hot restart).

1. Turn the choke lever to the open "I" position, and set the stop switch to the "ON" position.
2. Leave the throttle trigger in the idle position and pull the starter grip.
3. If the engine fails to start after three to four pulls, follow the instructions in the Cold Starting Procedure section above.

If the engine fails to start after you follow the above procedures, contact an authorized PLP dealer.

To Stop the Engine

1. Release the throttle trigger.
2. Slide the stop switch to "STOP" position.

Idle Speed Adjustment

This Multi-cutter is equipped with non-adjustable fuel mixture carburetor. The idle speed is the only adjustment for the operator.

WARNING

POTENTIAL HAZARD

- Engine must be running to make carburetor adjustments.
- When engine is running, attached tool and other parts are moving.

WHAT CAN HAPPEN

- Contact with moving attached tool or other moving parts could cause serious personal injury or death.

HOW TO AVOID THE HAZARD

- Keep hands, feet and clothing away from attached tool and other moving parts.
- Keep all bystanders and pets away from unit while making carburetor adjustments.

The attached tool may be moving during idle speed adjustment.

Wear the recommended personal protective equipment and observe all safety instructions.

Keep hands and body away from the attached tool.


When the throttle trigger is released, the engine should return to an idle speed. The correct speed is 2700 - 3300 min⁻¹ (or just below the clutch engagement speed). The attached tool must not move and the engine should not stall (stop running) at engine idle speed.

To adjust the engine idle speed, rotate the idle speed adjustment screw on the carburetor.

- Turn the idle speed screw in (clockwise) to increase the engine idle speed.
- Turn the screw out (counterclockwise) to decrease the engine idle speed.

If idle speed adjustment is necessary, and after adjustment the cutting attachment rotates or the engine stalls, stop using the Multi-cutter immediately!

Contact your local authorized PLP Dealer for assistance and servicing.

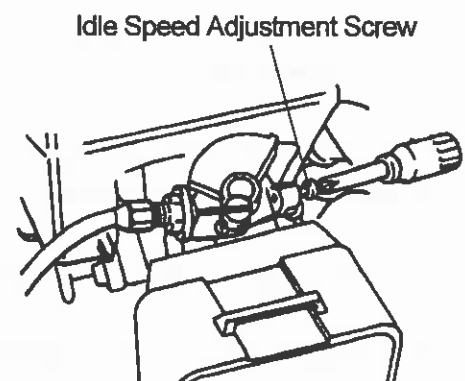

Operation

MC-S(Multi-Cutter with String Trimmer Attachment)

! CAUTION

- Read the Safety instructions beginning on page 2 concerning proper use of the Multi-Cutter.


Operating Position

! CAUTION

- Always wear gloves and protective clothing when operating the Multi-Cutter with String Trimmer Attachment.

Before using the Multi-Cutter with String Trimmer Attachment, check the following:

1. The unit may be on the operator's right side. The operator's right hand should be holding the shaft grip, with his or her fingers on the throttle trigger. The right arm should be slightly bent.
2. The left hand should be holding the loop handle with the fingers and thumb fully enclosed around the grip. The left arm should be extended. Reposition the loop handle up or down the driveshaft if necessary for a comfortable position.
3. The Trimmer weight should be evenly distributed between the arms. The trimmer head should be near and parallel to the ground.
4. Accelerate and hold the engine at cutting speed before entering the material to be cut.
5. Always release the throttle trigger and allow the engine to return to idle speed when not cutting.
6. Stop the engine when moving between work sites.
 - If the trimmer head becomes jammed, stop the engine immediately.
 - Make certain all moving parts have stopped and disconnect the spark plug before inspecting the equipment for damage.
 - Never use a unit that has a chipped, cracked or broken trimmer head.
 - Snap the strap hook into the ring on the drive shaft. To detach the strap quickly from the unit, pull upward on red band.

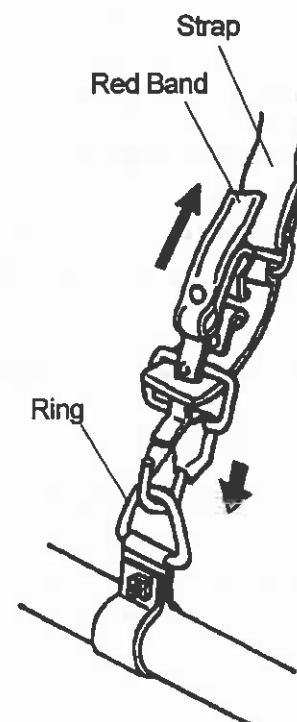

Cutting with Nylon Trimmer Line

WARNING

POTENTIAL HAZARD

- Use of improper line could cause line to break and be thrown in operator's or bystander's direction.


WHAT CAN HAPPEN

- Use of improper line could result in serious personal injury.


HOW TO AVOID THE HAZARD

- Use only good quality, commercial grade, weld resistant trimmer line with a diameter of 2,4mm.
- Do not use any type of wire or other string-like substance. Do not use metal-reinforced line.

- The tip of the line does the cutting. The line should stay extended while cutting.

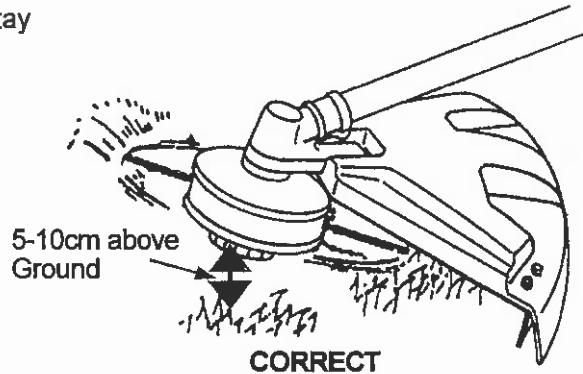


- Do not force the line into the material. Forcing the line will cause it to slap against the material, increasing line usage and causing poor cutting results.

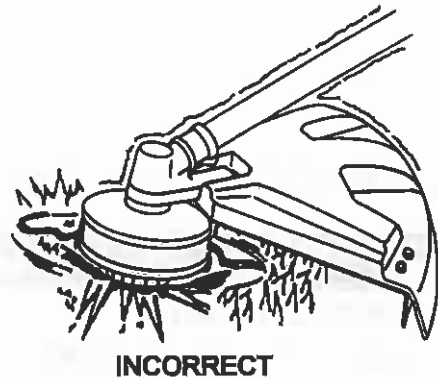


Trimming

Hold the bottom of the trimmer head about 5-10cm above the ground and at an angle. Allow only the tip of the line to make contact.

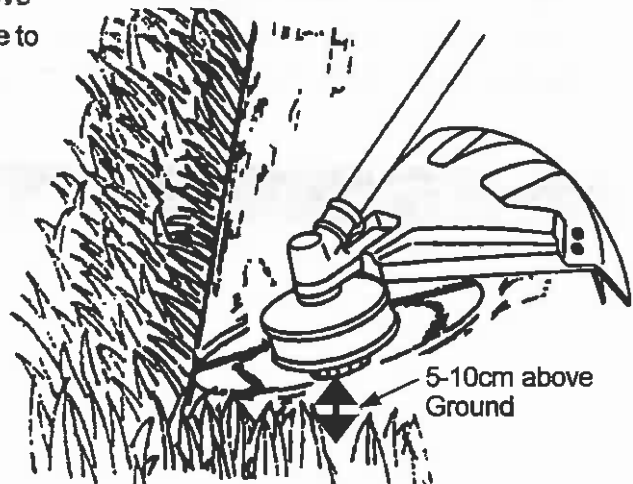


Scaling

To remove unwanted vegetation, hold the trimmer head about 5-10cm above the ground and at an angle. Allow the tip of the line to strike the ground cutting the vegetation off at the surface.

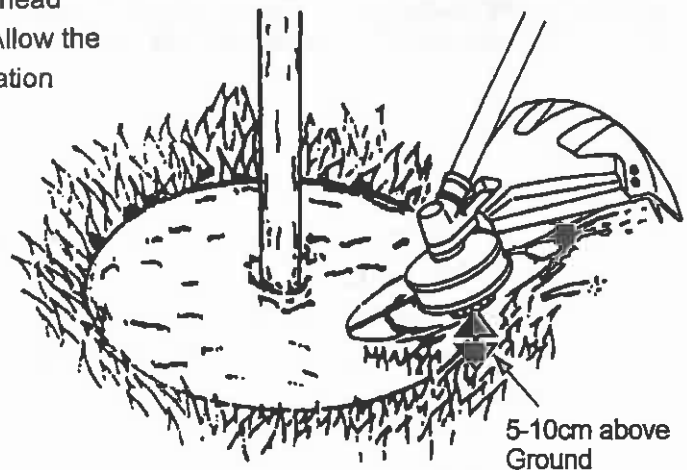

Mowing

Keep the line parallel to the ground and use a gentle side-to-side motion.

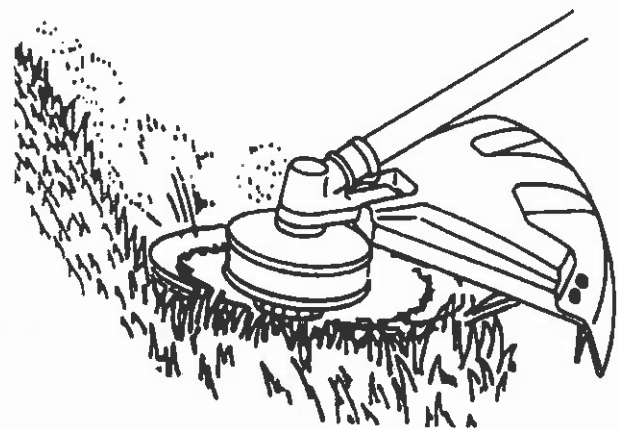

MC-E(Multi-Cutter with Edger Attachment)

WARNING

POTENTIAL HAZARD

- Foreign objects can be thrown by Edger Attachment.

WHAT CAN HAPPEN

- Contact with thrown objects can cause personal injury.

HOW TO AVOID THE HAZARD

- Never operate the Edger Attachment without the blade guard in place.
- Make sure the blade guard is correctly positioned to shield operator from thrown debris.


CAUTION

- Read the Safety Instructions beginning on page 2 concerning proper use of the Multi-Cutter.

Operating Position

Before using the Multi-Cutter with Edger Attachment, check the following:

1. The unit should be on the operator's right side.
2. The operator's right hand should be holding the shaft grip, with his or her fingers on the throttle trigger. The right arm should be slightly bent.
3. The left hand should be holding the loop handle with the fingers and thumb fully enclosed around the grip. The left arm should be extended. Reposition the loop handle up or down the driveshaft if necessary for a comfortable position.
4. The Edger weight should be evenly distributed between the arms.

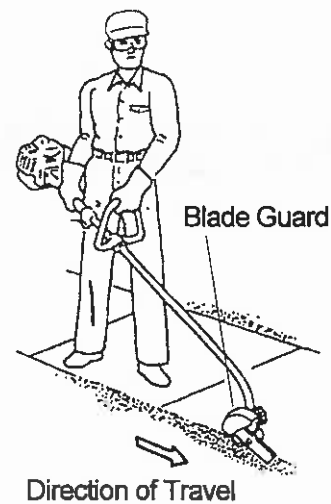

5. Adjust the Edger to the correct cutting depth before you start the engine. (Refer to Setting Depth of Cut on this page) Make sure the blade guard is adjusted to shield the operator from thrown debris.
6. Make sure the blade is rotating (at least half throttle) before inserting the blade into the cut. The Edger performs best at full throttle.
7. Always release the throttle trigger and allow the engine to return to idle speed when not cutting.
8. Stop the engine when moving between work sites.

CAUTION


- Always wear gloves and protective clothing when operating the Multi-Cutter with Edger Attachment.

- If the Edger blade becomes jammed, stop the engine immediately.
- Make certain all moving parts have stopped and disconnect the spark plug before inspecting the equipment for damage.
- Never use a unit that has chipped, cracked or broken Edger blade or blade guard.

Setting Depth of Cut

IMPORTANT: Set the depth of cut before you start the engine.

1. Loosen the knob holding the guard to the plate.
2. Rotate the guard as necessary to set the depth of cut.
Note that:
 - Rotating the guard to raise the wheel increases the depth of cut.
 - Rotating the guard to lower the wheel decreases the depth of cut.
3. Make sure the guard is positioned to protect the operator from thrown debris, then tighten the knob.

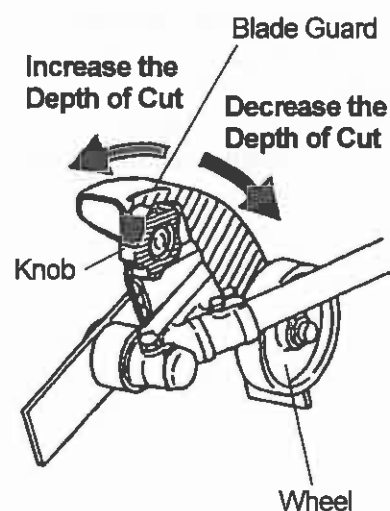

MC-HT/MC-HTS(Multi-Cutter with Hedge Trimmer Attachment)

⚠ CAUTION

- Read the Safety instructions beginning on page 3 concerning proper use of the Multi-Cutter.

Operating Position

Before using the Multi-Cutter with Hedge Trimmer Attachment, check the following:

1. The unit should be on operator's right side.
2. The operator's right hand should be holding the shaft grip, with his or her fingers on the throttle trigger. The right arm should be slightly bent.
3. The left hand should be holding the loop handle with the fingers and thumb fully enclosed around the grip. Reposition the loop handle up or down the driveshaft if necessary for a comfortable position.
4. The Hedge Trimmer weight should be evenly distributed between the arms.

⚠ CAUTION

- Do not touch the sharpened edges of the cutting blades. The cutting blades are extremely sharp and dangerous at all times. Always wear gloves and protective clothing.

5. Make sure the cutting blades are moving (at least half throttle) before actual cutting begins. The Hedge Trimmer performs best at full throttle.
6. Always release the throttle trigger and allow the engine to return to speed when not cutting.
7. Stop the engine when moving between work sites.
 - If the cutting blades becomes jammed, stop the engine immediately.
 - Make certain all moving parts have stopped and disconnect the spark plug before inspecting the equipment for damage.
 - Never use a unit that has chipped, cracked or broken blades.

IMPORTANT: The thickness of branches which may be cut using this trimmer is limited to up to approximately 4.5mm. Never try to cut branches thicker than this, as doing so may result in damage to the trimmer.


8. When transporting the Hedge Trimmer always fit the blade sheath.

Adjusting the angle of the blades [MC-HTS]

⚠ CAUTION

- Do not touch the sharpened edges of the cutting blades. The cutting blades are extremely sharp and dangerous at all times. Always wear gloves to help protect your hands and fingers from injury.
- Do not hold any other part except the handle when adjusting the angle of the blades.
- Stop the engine when adjusting the angle of the blades.

1. Turn the clamp lever and loosen the clamp bolt. The clamp lever is designed to turn freely for your desired position. Lift and turn down the lever for your desired position. The lever should be fixed at the desired position.
2. Always hold the handle when you adjust the angle of the blades. The blades are able to adjust the angle from 90 degree upwards to 45 degree downwards.
3. After adjusting the angle, tighten the clamp lever firmly and fix the gearcase.

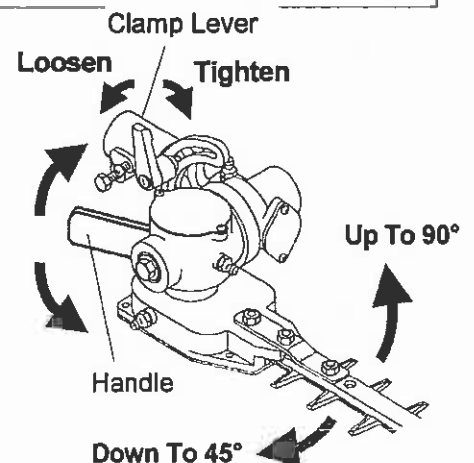

MC-PS(Multi-Cutter with Pruner Attachment)

WARNING

POTENTIAL HAZARD

- The Pruner can conduct electricity.

WHAT CAN HAPPEN

- Contact with live electrical wires or circuits can cause serious injury or death.

HOW TO AVOID THE HAZARD

- Never use the Pruner Attachment around electrical lines, circuits or components.

CAUTION

- Read the Safety Instructions beginning on page 2 concerning proper use of the Multi-Cutter.

Before using the Multi-Cutter with Pruner Attachment, check the following:

1. Make sure the chain oil tank on the pruner head is full.

IMPORTANT: When filling an empty oil tank, wait approximately 60-90 seconds before starting the Pruner. This will give the oil time to flow from the tank to the pump. Otherwise, an air lock can occur which will prevent oil from moving through the pump. This will result in damage to the chain and guide bar.

IMPORTANT: Never run the chain dry.

2. The unit may be on the operator's right side. The operator's right hand should be holding the shaft grip, with his or her fingers on the throttle trigger. The right arm should be slightly bent.
3. The left hand should be holding the loop handle with the fingers and thumb fully enclosed around the grip. The left arm should be extended. Reposition the loop handle up or down the driveshaft if necessary for a comfortable position.
4. The Pruner weight should be evenly distributed between the arms.
5. Always release the throttle trigger and allow the engine to return to idle speed when not cutting.
6. Stop the engine when moving between work sites.

CAUTION

- Always wear gloves and protective clothing when operating the Multi-Cutter with Pruner Attachment.

- If the Pruner chain becomes jammed, stop the engine immediately.
- Make certain all moving parts have stopped and disconnect the spark plug before inspecting the equipment for damage.
- Never use a unit that has a damaged chain or guide bar.

MC-T(Multi-Cutter with Cultivator Attachment)

CAUTION

- Read the Safety instructions beginning on page 2 concerning proper use of the Multi-Cutter.

Operating Position


Before using the Multi-Cutter with Cultivator Attachment, check the following:

1. The unit may be on operator's right side. The operator's right hand should be holding the shaft grip, with his or her fingers on the throttle trigger. The right arm should be slightly bent.
2. The left hand should be holding the loop handle with the fingers and thumb fully enclosed around the grip. The left arm should be extended. Reposition the loop handle up or down the driveshaft if necessary for a comfortable position.
3. Do not operate the unit in hard un-tilled soil or in rocky areas.
4. Do not operate the unit in areas with vines or tree roots.
5. Do not operate the unit in water.
6. Always release the throttle trigger and allow the engine to return to idle speed when not cultivating.
7. Stop the engine when moving between work sites.

CAUTION

- Always wear gloves and protective clothing when operating the Multi-Cutter with Cultivator Attachment.

- The unit should be operated only while traveling forward. Working the unit with a back-and-forth motion while traveling produces the best results. A fast or slow engine speed can be used according to soil conditions.

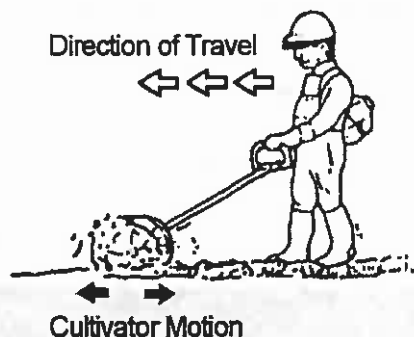

- If the Cultivator tines becomes jammed, stop the engine immediately. Make certain all moving parts have stopped and disconnect the spark plug before attempting to remove any obstruction.
- The cultivator gearcase becomes very hot during operation. Do not touch the gearcase.
- Make certain all moving parts have stopped and disconnect the spark plug before inspecting the equipment for damage.
- Never use a unit that has cracked or broken tines.

Maintenance


Air Filter

Maintenance Interval

- The air filter should be cleaned **daily**, or more often when working in extremely dusty conditions.
- Replace after every 100 hours of operation.

Air Filter Cleaning

1. Remove the foam element.
2. Clean the foam element with warm, soapy water. Let the element dry completely.
3. Apply a light coat of SAE 30 motor oil to the foam element and squeeze out all excess oil.
4. Reassemble the foam element and filter cover.

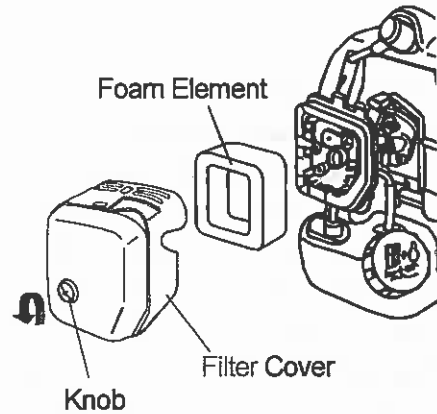

Fuel Filter


Maintenance Interval

The fuel filter should be replaced after every 100 hours of operation.

Fuel Filter Replacement

The fuel filter is attached to the end of the fuel pick-up hose inside the tank. To replace the fuel filter:

1. Make sure the fuel tank is empty.
2. Remove the fuel cap.
3. Using a wire hook, gently pull the fuel filter out through the fuel filler opening.
4. Grasp the fuel hose next to the fuel filter fitting and remove the filter, but do not release the hose.
5. While still holding on to fuel hose, attach the new fuel filter.
6. Drop the new fuel filter back into the fuel tank.
7. Make sure that the fuel filter is not stuck in a corner of the tank, and that the fuel hose is not doubled over (kinked) before refueling.

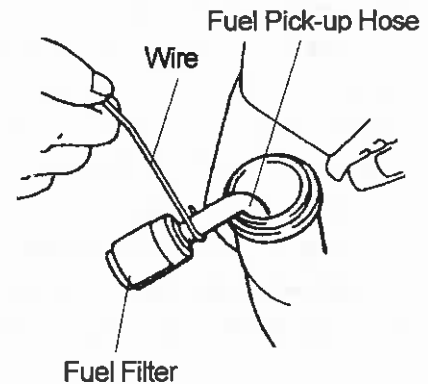


Spark Plug

Maintenance Interval

- The spark plug should be removed from the engine and checked after each 25 hours of operation.
- Replace the spark plug after every 100 hours of operation.

Spark Plug Maintenance

1. Twist the high tension lead boot on the spark plug back and forth a couple of times to loosen the boot, then pull the boot off of the spark plug.
2. Remove the spark plug.
3. Clean the electrodes with a stiff brush.
4. Adjust the electrode air gap to 0.6-0.7 mm.
5. Replace the spark plug if it is oil-fouled, damaged, or if the electrodes are worn down.
6. Do not over tighten the spark plug when installing.
The tightening torque is 10.7-16.6 N·m.

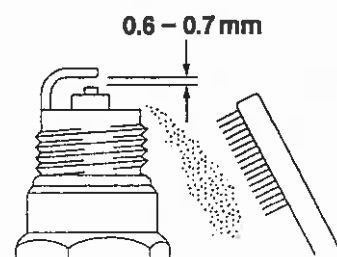

Cylinder Cooling Fins




Maintenance Interval

- The cylinder cooling fins should be cleaned after every 25 hours of operation, or once a week, whichever comes first.
- Air must flow freely around and through the cylinder cooling fins to prevent engine overheating. Leaves, grass, dirt and debris buildup on the fins will increase the operating temperature of the engine, which can reduce engine performance and shorten engine life.

Cooling Fin Cleaning

Note: It's necessary to remove the swivel ring before detach the cylinder cover.

1. Press up the bottom of the swivel ring to remove the swivel ring. Note: Take care of falling the swivel ring in the engine when remove the swivel ring.
2. Rotate the carburetor throttle cam and slip out the throttle cable tab from the slot in the slotted fitting.
3. Loosen the screw. Turn up the hook, then pull out the throttle cable housing from the guide.
4. Twist the high tension lead boot on the spark plug back and forth a couple of times to loosen the boot, then pull the boot off of the spark plug.
5. Remove three screws and lift off the cylinder cover.
6. Clean all dirt and debris from the cooling fins and from around the cylinder base.
7. After cleaning, reinstall the cylinder cover and the high tension lead boot. Then reinstall the throttle wire, hook, throttle cable end and swivel ring in order.

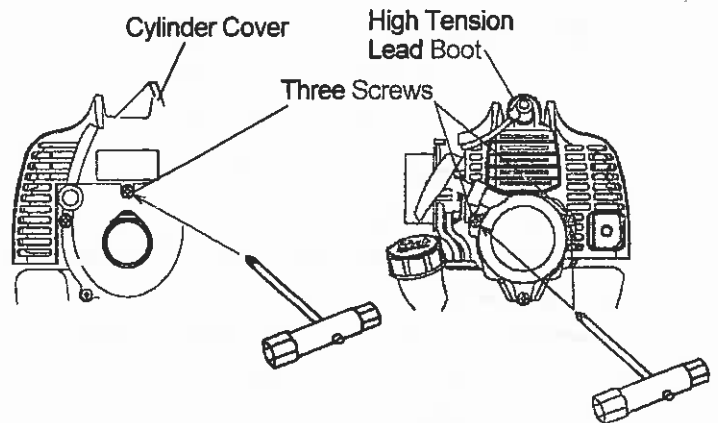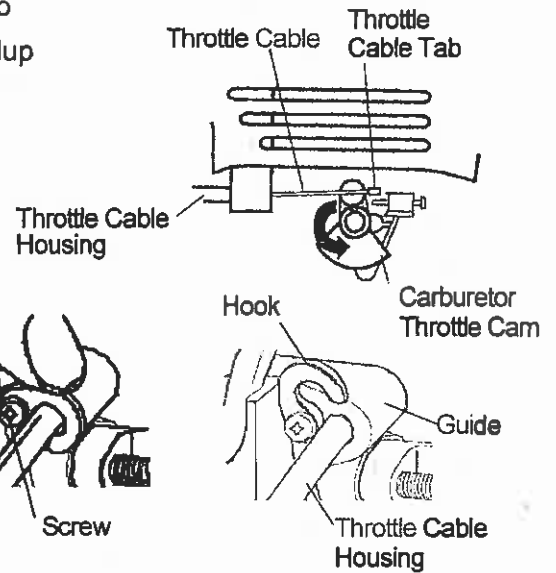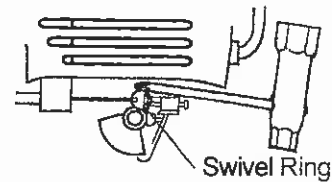

Spark Arrester

⚠ WARNING

POTENTIAL HAZARD

- Muffler surface becomes hot when Trimmer/Brushcutter is in operation and remains hot for sometime after the engine is shut off.

WHAT CAN HAPPEN

- Contact with hot muffler surface could cause a burn.

HOW TO AVOID THE HAZARD

- Make sure the muffler is cool before inspecting and cleaning the spark arrester.

Maintenance Interval

- The spark arrester should be inspected and cleaned after every 25 hours of operation. Replace the screen if it cannot be thoroughly cleaned or if it is damaged.


Maintenance

- The spark arrester is installed inside the exhaust outlet of the muffler.

One screw and washer located on the side of the exhaust outlet holds the spark arrester in place.

1. Remove the cylinder cover. (See section "Cylinder Cooling Fins")
2. Remove spark arrester retaining screw, then using a suitable pair of pliers, withdraw the spark arrester. Do not crush or distort the spark arrester flange during removal.
3. The screen can be cleaned using a non-flammable solvent and a stiff wire brush.

- To reinstall insert the spark arrester into the exhaust outlet while aligning the holes in the arrester flange and outlet for the retaining screw.
- Reinstall the screw and washer, then reinstall the cylinder cover.

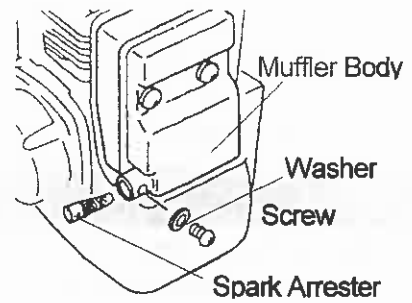

MC-S(String Trimmer Attachment)


Gearcase

Maintenance Interval

The gearcase should be checked for lubrication after each 30 hours of use.

Gearcase Lubrication

Remove the cutting attachment and the boss adapter. Clean any dirt and debris from the area between the boss adapter and the gearcase. Remove the grease plug from the side of the gearcase. While rotating the attaching shaft, inject lithium-base bearing lube (P/N 211337) through the plug hole until the gearcase is full. Reinstall the boss adapter and grease plug.

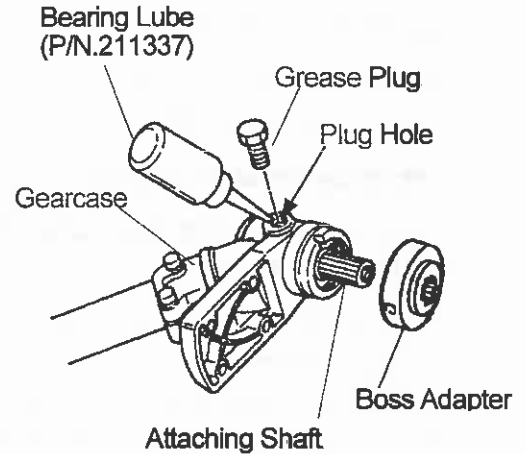

MC-E(Edger Attachment)


Flexible Drive Shaft

Maintenance Interval

The Edger Attachment uses a flexible drive shaft inside the drive shaft tube. The flexible drive shaft should be lubricated after each 30 hours of use.

Flexible Drive Shaft Lubrication

- Loosen the two screws holding the gearcase to the drive shaft tube and carefully remove the gearcase from the drive shaft tube.
- Grip the end of the flexible drive shaft and remove it from the drive shaft tube.
- Lubricate the flexible drive shaft with a high quality #2 lithium-base bearing lube.
- Reinstall the flexible drive shaft into the drive shaft tube. Twist the flexible drive shaft as you insert it into the to ensure that it seats into the clutch drum.
- Reinstall the gearcase onto the drive shaft tube, then tighten the two screws.

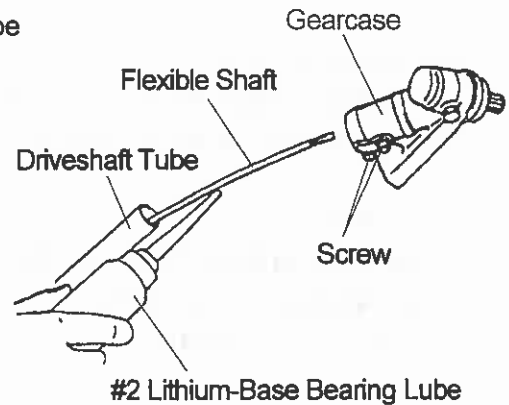


Gearcase

Maintenance Interval

The gearcase lubricant should be inspected for after every 30 hours of use.

Gearcase Maintenance

Remove the blade and the boss adapter. Clean any dirt and debris from the area between the boss adapter and the gearcase. Remove the gearcase plug from the side of the gearcase. While rotating the attaching shaft, inject lithium-base bearing lube (P/N 211337) through the plug hole until the gearcase is full. Re-install the gearcase plug.

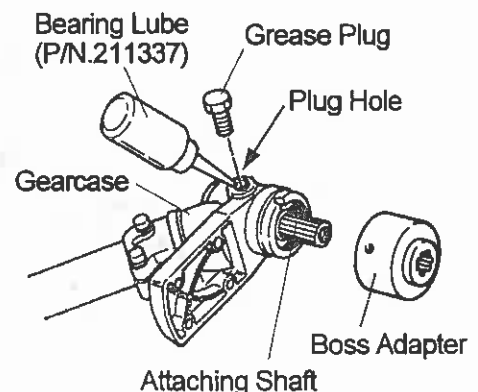

MC-HT/MC-HTS(Hedge Trimmer Attachment)

Adjusting Cutting Blades

CAUTION

- Do not touch the sharpened edges of the cutting blades. The cutting blades are extremely sharp and dangerous at all times.

Maintenance Interval

Before operating the Multi-Cutter with Hedge Trimmer Attachment it is necessary to check the adjustment of the cutting blades. Blades that are too loose may vibrate, and will not provide a clean, smooth cut.


Cutting Blades Maintenance

CAUTION-BLADES THAT ARE TOO TIGHT CAN CAUSE OVERLOADING WHICH MAY DAMAGE THE EQUIPMENT.

To adjust the cutting blades, refer to the illustrations and locate the tension screws.

Loosen the tension screw lock nuts. Gently turn the tension screws in until snug, then turn the tension screws back out the lock nuts. Liberally coat the cutting blades with light oil. Start the engine and operate the Multi-Cutter with Hedge Trimmer Attachment at full speed for at least one minute. Stop the engine, and when the blades are motionless, touch the blades with your hand.

The blades may be warm, but if they are too hot to touch, loosen the tension screws 1/8 turn.

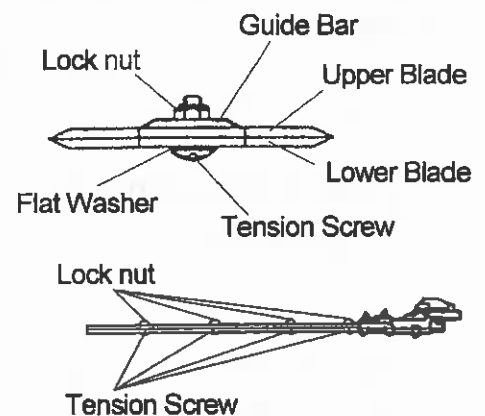

Lubrication

Maintenance Interval



- The gearcase and angle drive should be inspected after each 10 to 20 hours of use.
- Cutting blades should be lubricated at all times.

Lubrication

The gearcase and angle drive should be checked for lubrication after each 10 to 20 hours of use.

Grease fittings are installed into both components. Use #2 lithium-base bearing lubricant.

Lubrication of the cutting blades should be maintained at all times. Use a light oil (#10wt.).

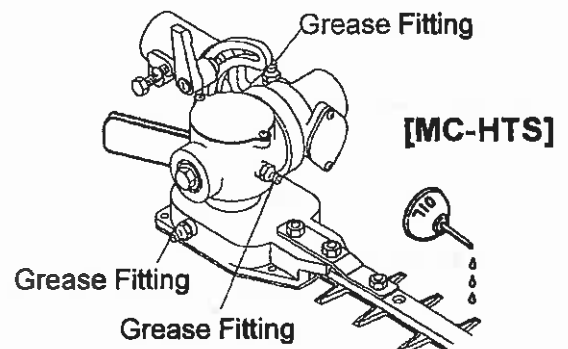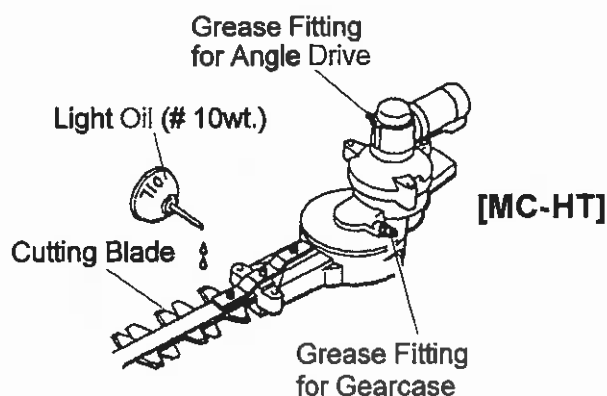

MC-T(Cultivator Attachment)

Lubrication


Maintenance Interval

The Cultivator gearcase should be inspected after each 25 hours of use.

Lubrication

The Cultivator gearcase holds 40g of lubricant. A grease fitting is located in the top of the gearcase. Lubricant should be checked at least every 25 hours of operation. Use a #2 lithium-based lubricant with Molybdenum additive.

Grease Fitting
for Gearcase

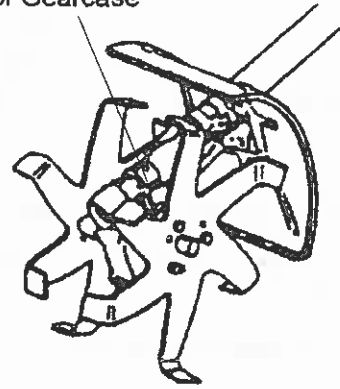

General Cleaning and Tightening

! WARNING

POTENTIAL HAZARD

- When engine is running, attached tool and other parts are moving.

WHAT CAN HAPPEN

- Contact with moving tool or other moving parts could cause serious personal injury or death.

HOW TO AVOID THE HAZARD

- Always turn off your Multi-Cutter before you clean or perform any maintenance on it.

The PLP Multi-Cutter will provide maximum performance for many, many hours if it is maintained properly. Good maintenance includes regular checking of all fasteners for correct tightness, and cleaning the entire machine.

Storage

For long term storage of the Multi-Cutter:

1. Empty the fuel tank into a suitable fuel storage container.
2. Run the engine to remove any fuel that may remain in the carburetor.
3. Perform all regular maintenance procedures and any needed repairs.
4. Remove the spark plug and squirt a very small amount of engine oil into the cylinder.

! CAUTION

POTENTIAL HAZARD


- Oil may squirt out of the spark plug opening when you pull the starter grip.

WHAT CAN HAPPEN

- Oil can cause eye injuries.

HOW TO AVOID THE HAZARD

- Protect your eyes and keep your face away from the spark plug opening.

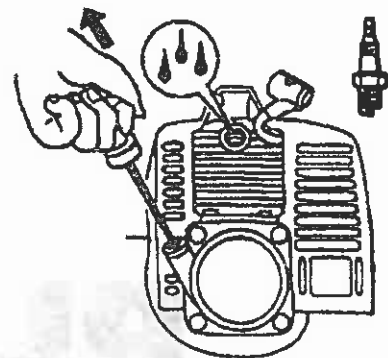

5. Pull the starter grip once.
6. Reinstall the spark plug.
7. Store the Multi-Cutter in a dry place away from excessive heat, sparks or open flame.

Troubleshooting

Problem	Cause	Action
Engine will not start	<ul style="list-style-type: none"> • STOP switch set to off position • Empty fuel tank • Primer bulb wasn't pushed enough • Engine flooded 	<ul style="list-style-type: none"> • Move switch to on position • Fill fuel tank • Press primer bulb until fuel flows through fuel return line • Use warm engine starting procedure
Engine will not Idle	<ul style="list-style-type: none"> • Idle speed set incorrectly 	<ul style="list-style-type: none"> • Set Idle speed
Engine lacks power or stalls when cutting	<ul style="list-style-type: none"> • Throttle wire has come loose • Dirty air filter 	<ul style="list-style-type: none"> • Tighten throttle wire • Clean or replace air filter

If further assistance is required, contact your local authorized PLP service dealer.

Specifications

	MT26 With					
	MC-S	MC-E	MC-HT	MC-HTS	MC-PL	MC-T
Weight ※1	5,0 kg	5,6 kg	6,5 kg	6,2 kg	6,0 kg	6,8 kg
Engine Displacement	25,4 cm ³					
Fuel Tank Capacity	0,6 litre					
Carburetor	Diaphragm Type					
Ignition System	Solid State					
Spark Plug	NGK BPMR6Y					
Fuel Mixture	Two cycle Oil Mix 25:1 Ratio					

※1. Dry weight without Cutting Attachment, harness and fuel.

PLP POWERUP
LAWNCARE PRODUCTS

Free Post 5 Redcliffe Qld 4020